
 



# How to use ZERUST® Rust Removers

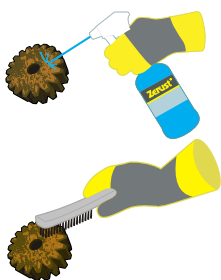


Use wire brush to remove loose scales if present



Immerse, spray-on or brush-on product according to product instructions and dip

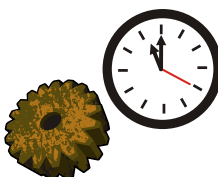

Wait recommended amount of time by product depending on rust level

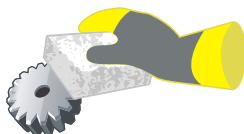


Using a sponge or clean rag remove dissolved rust



OPTIONAL: Using de-ionized water rinse part



Dry thoroughly with a clean cloth

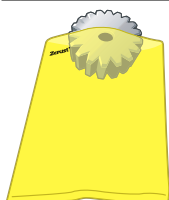

Keep your part clean and rust free during shipping or storage with additional protection from ZERUST® ICT® VCI Packaging.